


## **Upholstered Replacement Seat Instructions**

- 1. Place your new seat upside down (as shown) on a flat surface. Position your chair frame with the front of the replacement seat. For round replacements center in middle of frame base.
- 2. Make very small guide holes in bottom of seat with a nail or drill bit before fastening seat with screws to insure easier assembly.
- 3. Secure the seat to frame using original four (4) screws. Note: A little soap on the screw threads is a big help. (Caution: Do not over tighten screws.)

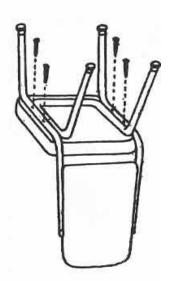

Your new replacement seat is ready to use.

Any questions or problems please call: 1-866-967-3287